Applications

Chrysler

300 2005-2007
Aspen 2007
PT Cruiser 2006-2010

Dodge

Charger 2005-2007
Caliber 2007-2008
Dakota 2005-2007
Durango 2004-2007
Magnum 2005-2007
Ram 2006-2008 *(**full** center console)*
2500/3500 2009
2500/3500 chassis cab 2010
Ram 2006-2008 *(**mini** center console)*
2500/3500 2009
2500/3500 chassis cab 2010

Dodge *(continued)*

Ram 2006-2008 *(**without** center console)*
2500/3500 2009
2500/3500 chassis cab 2010

Jeep

Commander 2006-2007
Compass 2007-2008
Grand Cherokee 2005-2007
Patriot 2007-2008

Mitsubishi

Raider 2006-2007

Table of Contents

Dash Disassembly

- Chrysler 300 2005-2007 4
- Chrysler Aspen 2007 3
- Chrysler PT Cruiser 2006-2010 8
- Dodge Charger 2005-2007 3
- Dodge Caliber 2007-2008 7
- Dodge Dakota 2005-2007 3
- Dodge Durango 2004-2007 3
- Dodge Magnum 2005-2007 3
- Dodge Ram 2006-2008 *(**full** center console)*, 2500/3500 2009, 2500/3500 chassis cab 2010 6
- Dodge Ram 2006-2008 *(**mini** center console)*, 2500/3500 2009, 2500/3500 chassis cab 2010 5
- Dodge Ram 2006-2008 *(**without** center console)*, 2500/3500 2009, 2500/3500 chassis cab 2010 4
- Jeep Commander 2006-2007 8
- Jeep Compass 2007-2008 7
- Jeep Grand Cherokee 2005-2007 7
- Jeep Patriot 2007-2008 7
- Mitsubishi Raider 2006-2007 9

Chrysler Aspen 2007, Dodge Dakota 2005-2007/Durango 2004-2007

1. Remove (2) 7mm screws from the inside of the pocket facing upward. (Figure A)
2. Unclip and remove the entire trim panel surrounding the radio and climate controls. (Figure B)
3. Remove (4) 7mm screws securing radio. Unplug and remove radio. (Figure C)

Continue to kit assembly

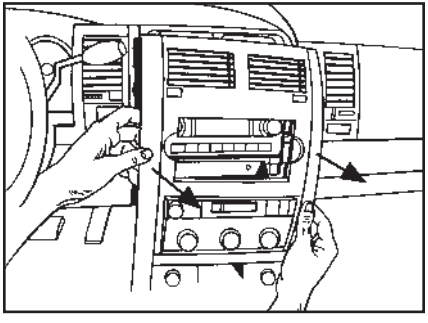

(Figure B)

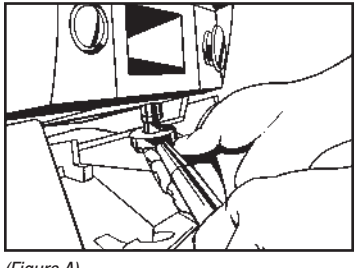

(Figure A)

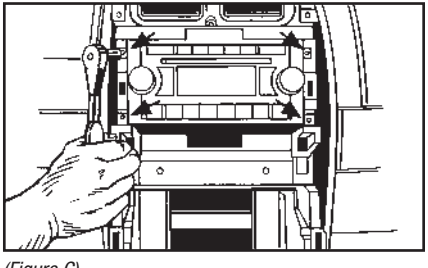

(Figure C)

Dodge Charger/Magnum 2005-2007

1. Unclip and remove entire panel surrounding radio and climate controls, including A/C vents. (Figure A)
2. Remove (4) 7mm screws securing radio. Unplug and remove radio. (Figure B)

Continue to kit assembly

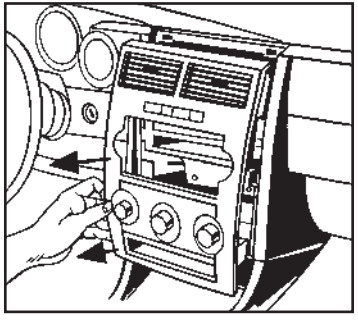

(Figure A)

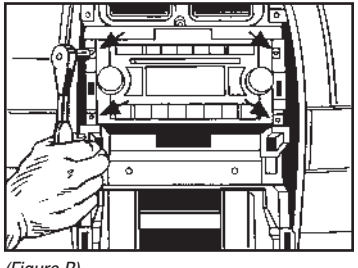

(Figure B)

Chrysler 300
2005-2007

1. Unclip and remove entire panel surrounding radio and climate controls, including A/C vents and clock. (Figure A)
2. Remove (4) 7mm screws securing radio. Unplug and remove radio. (Figure B)

Continue to kit assembly

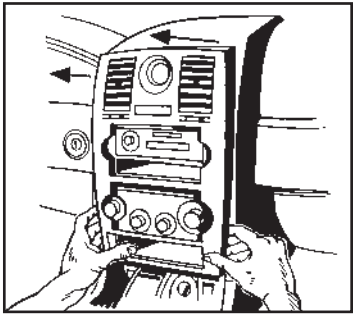

(Figure A)

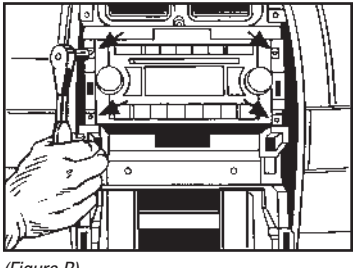

(Figure B)

Dodge Ram 2006-2008, 2500/3500
2009, 2500/2300 chassis cab 2010

*(**without** center console)*

1. Open cup holder and remove (2) Phillips screws facing up on front edge of radio/climate control panel. (Figure A)
2. Unclip and remove entire panel surrounding radio and climate controls, including A/C vents. (Figure B)
3. Remove (4) 7mm screws securing radio. Unplug and remove radio.

Continue to kit assembly

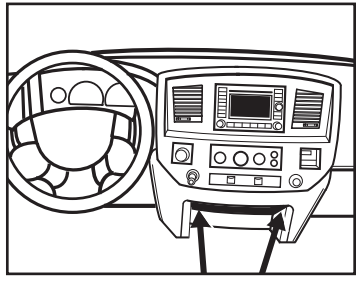

(Figure A)

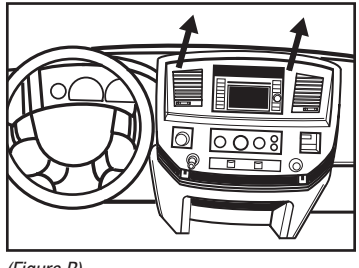

(Figure B)

Dodge Ram 2006-2008, 2500/3500 2009, 2500/2300 chassis cab 2010

*(with **mini** center console)*

1. If vehicle has floor shifter, remove shifter knob. Then remove center console inserts, if present. (Figure A)
2. Remove screws securing the rear center console to the floor panel. Lift up on the rear center console to clear the gear shift lever, if present. (Figure B)
3. Remove screws securing the front center console to the floor panel. Unclip and remove the front center console.(Figure C)
4. Remove (2) Phillips head screws at bottom of dash. Unsnap and remove lower panel.
5. Remove (2) Phillips screws facing up on front edge of radio/climate control panel. (Figure D)
6. Unclip and remove entire panel surrounding radio and climate controls, including A/C vents. (Figure E)
7. Remove (4) 7mm screws securing radio to dash and remove radio.

Continue to kit assembly

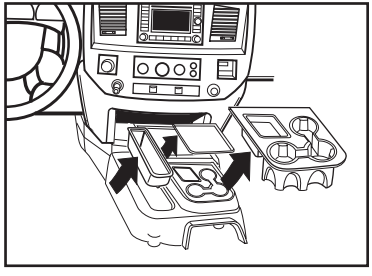

(Figure A)

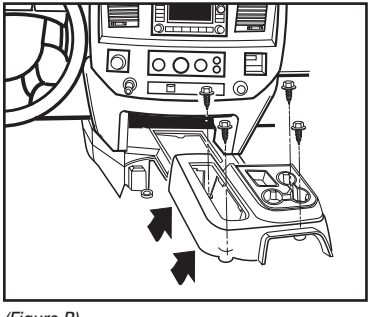

(Figure B)

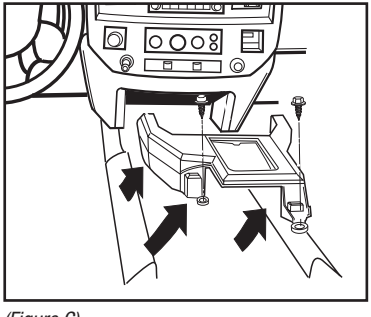

(Figure C)

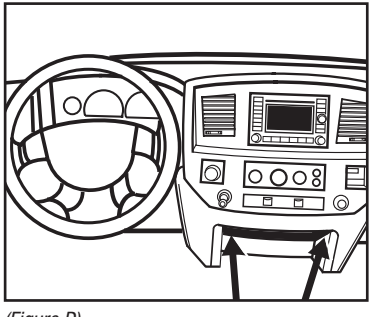

(Figure D)

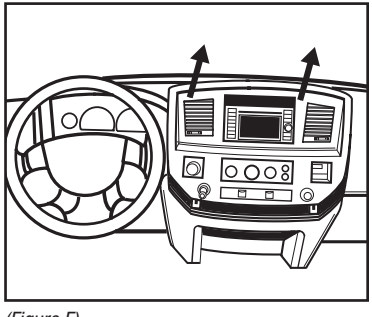

(Figure E)

Dodge Ram 2006-2008, 2500/3500 2009, 2500/2300 chassis cab 2010

*(with **full** center console)*

1. If vehicle has floor shifter, remove shifter knob.
2. Unsnap and remove console front top cover (closest to the dash). (Figure A)
3. Remove (2) 8mm screws from under console cover (previously removed). Remove front section of console. (Figure B)
4. Loosen (2) 8mm screws at bottom of dash. Unsnap lower panel.
5. Remove (2) Phillips screws facing up on front edge of radio/climate control panel. (Figure C)
6. Unclip and remove entire panel surrounding radio and climate controls, including A/C vents. (Figure D)
7. Remove (4) 7mm screws securing radio to dash and remove radio.

Continue to kit assembly

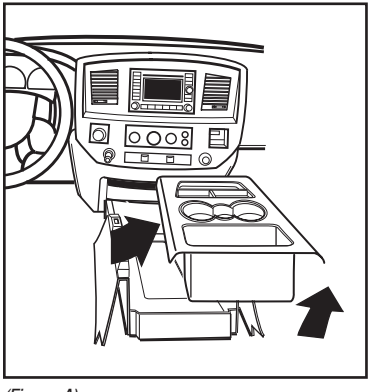

(Figure A)

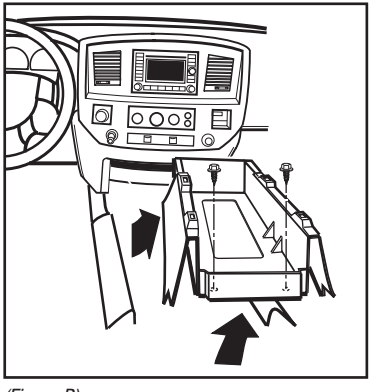

(Figure B)

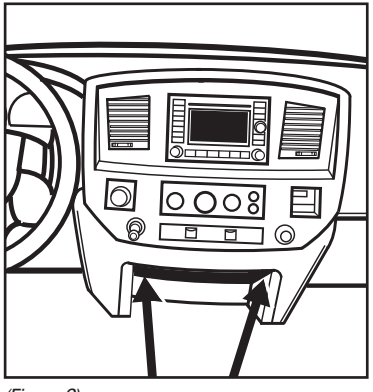

(Figure C)

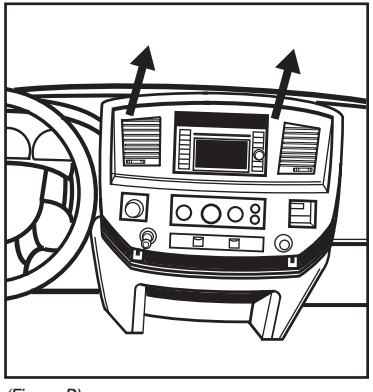

(Figure D)

Dodge Caliber 2007-2008, Jeep Compass/Patriot 2007-2008

1. Unsnap and move shifter trim to the side. (Figure A)
2. (Compass and Patriot only) Unsnap and remove top center dash panel above A/C vents.
3. Unsnap center dash trim panel (do not remove until climate controls are removed). (Figure A)
4. Remove (4) Phillips screws holding climate control panel to backside of the center dash panel.
5. Remove (4) 7mm screws securing radio. Unplug and remove radio.

Continue to kit assembly

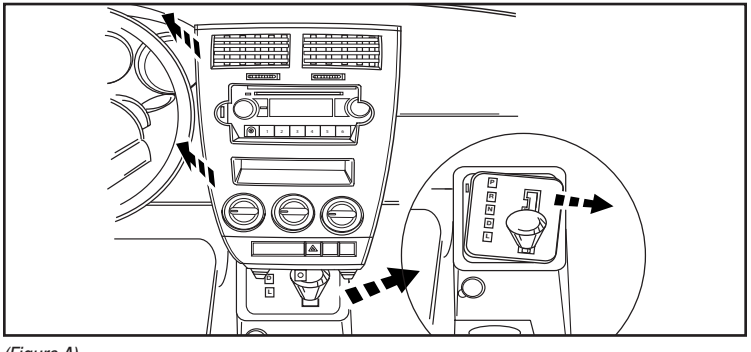

(Figure A)

Jeep Grand Cherokee 2005-2007

1. Unsnap and remove panel from around radio including the vent on each side. (Figure A)
2. Remove (4) 7mm screws securing radio. Unplug and remove radio. (Figure B)

Continue to kit assembly

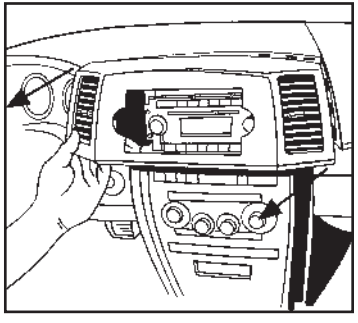

(Figure A)

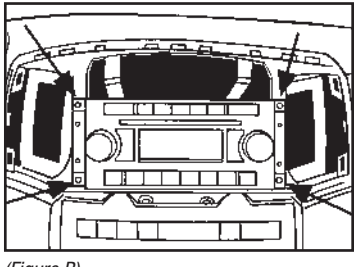

(Figure B)

Jeep Commander
2006-2007

1. Remove the (16) screws securing the radio trim panel. (Figure A)
2. Unclip and remove the entire radio trim panel. (Figure B)
3. Remove (4) 7mm screws securing radio. Unplug and remove radio.

Continue to kit assembly

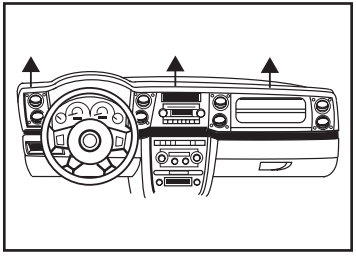

(Figure B)

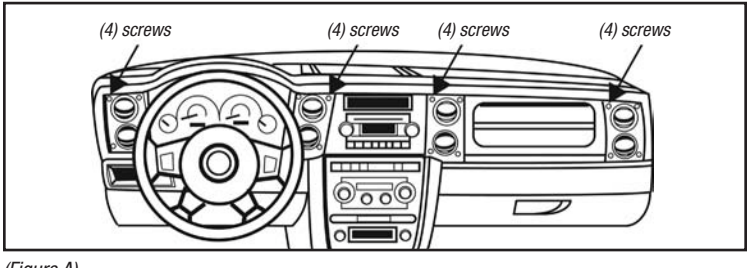

(Figure A)

Chrysler PT Cruiser
2006-2010

1. Remove (2) screws from inside air vents on center dash panel. (Figure A)
2. Unsnap center dash panel (do not remove until climate controls are removed). (Figure A)
3. Remove (4) Phillips screws holding climate control panel to backside of the center dash panel.
4. Remove (4) 7mm screws securing radio. Unplug and remove radio.

Continue to kit assembly

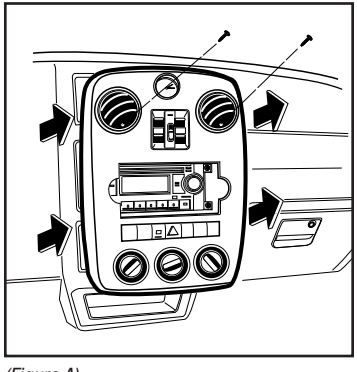

(Figure A)

Mitsubishi Raider
2006-2007

1. Unsnap and remove center dash panel. (Figure A)

2. Remove (4) 7mm screws securing radio. Unplug and remove radio.

Continue to kit assembly

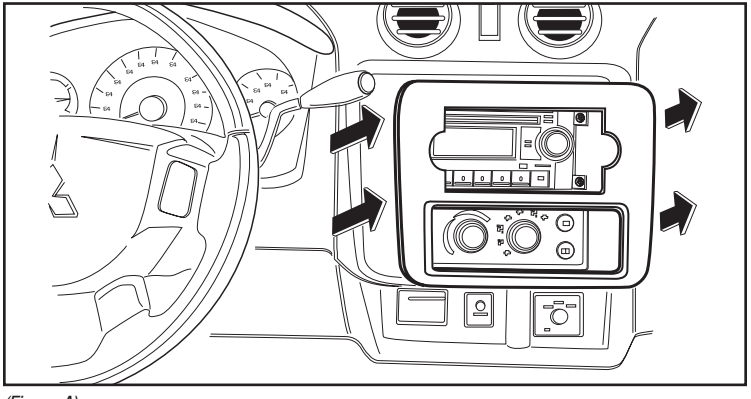

(Figure A)

Notes